




QUAD 33-303 instruction booklet

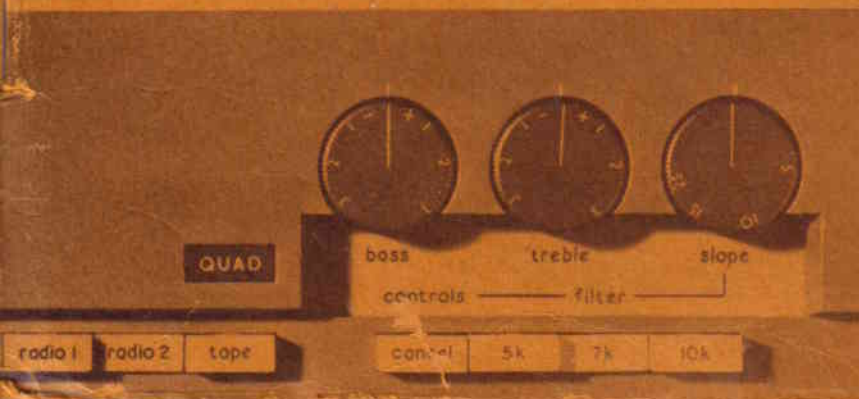

Contents

	Page
Introduction	2
Installation	3
Mounting the units	4 & 5
Connections	6 to 10
Pickup (Disc) Adaptor	7
Tape Adaptor	10
Initial Checks and Operation	13
Controls	13 to 15
Loudspeaker phasing	15
Loudspeaker position	17
Operation Summary	18
Service	18
Specifications	19 to 23
Guarantee	24

Illustrations

	Page
Installation Schematic	3
Pickup and motor wiring	3
Mounting the Quad 33	4
Connections to Quad 303	5
DIN plugs	6
DISC input	7
Disc Adaptor Board	8
Tape and Radio inputs	8
Tape Adaptor Board	9
Tape Adaptor adjustments	10
Quad 33 rear panel layout	11
Quad 33 controls	12
Quad 33 performance curves	16
Quad 303 performance curves	23

THE ACOUSTICAL MANUFACTURING CO. LTD.

ST. PETERS ROAD, HUNTINGDON, ENGLAND

Telephone: Huntingdon (0480) 2561

Telegrams: Acoustical Huntingdon

Issue 4/3m/271

QUAD

**for the closest
approach to the
original sound**

INTRODUCTION

This amplifier has been designed to provide the best possible quality of reproduction but it must be borne in mind that the standard of performance of the complete equipment will be limited by that of the poorest link in the chain. Thus, the gramophone motor, pickup, loudspeaker, etc., should all receive careful consideration if full advantage is to be taken of the capabilities of the amplifier.

A complete installation is shown in Fig. 1 and the same basic arrangement will apply in whole or in part, whatever associated equipment is used with the Quad 33. Installation is quite straightforward and should present no difficulty to the intelligent enthusiast provided the following notes are observed.

Please note that three printed circuit boards from the Quad 33 are packed separately for safe transit. These must be inserted during installation. See Fig. 3 and also instructions contained in the packing.

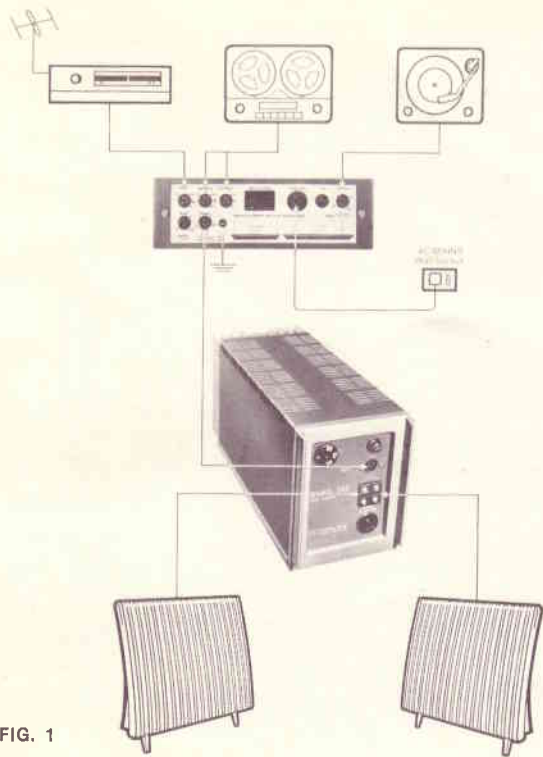


FIG. 1

INSTALLATION

Normally equipment of this type may be either mounted in a wide variety of housings or used free-standing, and if you are designing your own layout it might be advisable to assemble all the parts in a mock-up form before deciding on the final arrangement, just to make sure there are no unforeseen difficulties of operation or inter-unit wiring, etc.

Adequate ventilation must be provided for units producing heat, including transistorised power amplifiers and if the latter are to be mounted closer than about 12 inches from either control unit or tuner it might be necessary to experiment with orientation and position to ensure that no hum is induced in the latter units.

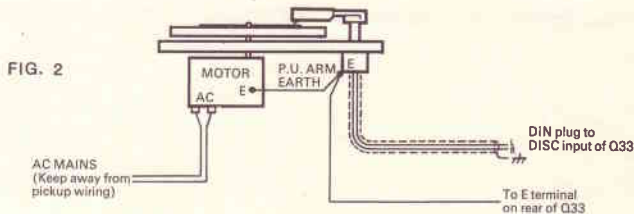


FIG. 2

Close proximity of the control unit and tuners to each other should cause no problem unless the control unit is mounted immediately on top of the tuner, in which case a space of about two inches should be left between them.

Hum can also occur if a low output magnetic pickup is too close to a mains transformer or if its leads run close to the mains wiring. (See Fig. 2).

All metal parts must be earthed but, because multiple earth connections cause hum, they should be earthed, directly or indirectly, by one connection only, and the whole installation earthed at one point such as the E terminal on the rear of the control unit, OR the third pin of the control unit mains socket, but not both.

(Note: All the Quad units are already bonded together by their own inter-connecting cables).

Always follow the manufacturers' instructions supplied with pickup, motor, tape recorder, etc., and refer any query which may arise to your dealer or in case of difficulty to the manufacturer concerned.

Page Four

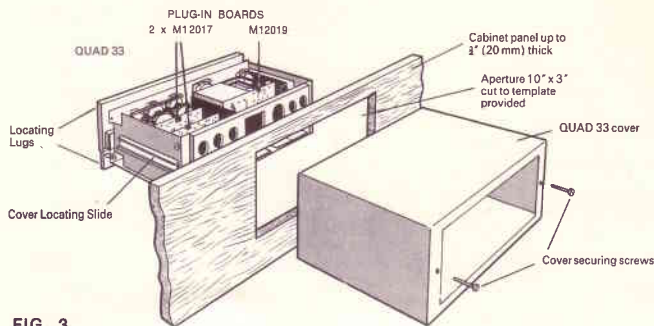


FIG. 3

If the Quad 33 is not to be used free standing you will require an aperture 10" x 3" as shown in Fig. 3 and a template is provided in the rear of this booklet to assist in marking this out on the cabinet. The cover is then removed from the Quad 33, the unit passed through the aperture from the front so that its lugs locate in the aperture, and the cover replaced from the rear, thus gripping the cabinet panel between the Quad 33 front casting and its cover. The securing screws should be inserted finger tight and then given one further half-turn to lock the unit firmly in position.




FIG. 4

The Quad 303 carries no controls and may be mounted out of sight inside the cabinet or at any other convenient position in the installation.

The Quad 303 may be either stood on its feet on a shelf or base board of a cabinet, or more securely fixed by drilling four holes in the shelf or board to coincide with the feet centres, removing the feet securing screws and passing the longer screws provided, up through these holes, through the feet which act as spacers to assist circulation of air under the amplifier, and into the tapped bushes in the base-plate.

Slots or holes should be cut in or near the base and in or near the top of any enclosed compartment to permit a flow of air upwards through the compartment, past and through the amplifier to assist ventilation. In confined spaces where the exit vents are not directly over the amplifier a deflector plate of plywood or asbestos may be mounted at an inclined angle above the amplifier to help guide the rising warm air towards the exit vent and prevent an accumulation of warm air under a closed horizontal top.

CONNECTIONS

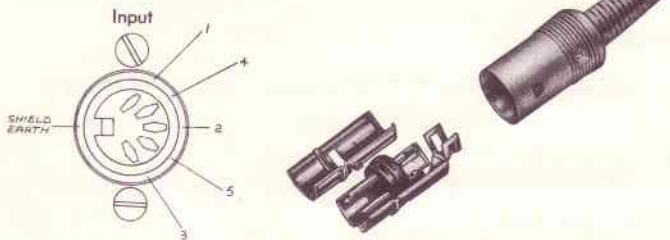

Din style plugs showing method of assembly. See individual illustrations for pin connections.

Control Unit to Power Amplifier

Two leads are supplied with the control unit. That with a 4-pin connector at each end is reversible and connects the control unit output to the power amplifier input. The other connects the switched mains supply from the control unit to the power amplifier and the 2-pin plug at the control unit end of this lead is reversible. (See Fig. 10). Longer leads are permissible where required for special installations (see Specification on page 21).

Page Six

Power Amplifier to Loudspeakers

Ordinary lighting flex or similar cable may be used for connecting the loudspeakers to the power amplifier unless a very long run is involved in which case a heavier calibre cable should be used. As a rough guide the DC resistance of the cable should not exceed about 5% of the nominal impedance of the loudspeaker. Each loudspeaker should be connected to its appropriate power amplifier output so that the two pairs of wires are connected in the same way, to ensure that the speakers operate in phase. For example, if the top output socket on one channel is connected to the left-hand terminal of its speaker, the top output socket on the other channel should also be connected to the left-hand terminal of its speaker. This is quite straightforward but should there be any doubt the phasing can be checked later experimentally. (See Page 15). Where one loudspeaker only is used for mono, phase is not important and in this case either outlet may be used and the sockets of the other channel left vacant.

In cases where loudspeakers, such as the electrostatic loudspeaker, also require an energising supply, the

instructions provided with the loudspeaker should be followed. Each loudspeaker should be capable of handling the full output of the power amplifier.

Note: *Quad electrostatic loudspeakers prior to serial number 16800 need slight modification before being used with the Quad 303 amplifier.*

Pickup (Disc) Input

The pickup input is via a 5-pin plug and the same connections are used for all types of pickup. The necessary change in input circuitry to suit different types of pickup is achieved by the Disc Adaptor Board. This board provides matching for pickups of low output magnetic types (M1), high output magnetic types (M2), ceramic types (C1), and a spare position (S1), according to the edge inserted into the holder. (See Specification on Page 20).

The M2 position should normally be used for most magnetic pickups but for those with very low outputs M1 should be used instead.

The fourth position is to enable the amateur or professional engineer to provide any other circuit configuration he may require and it also provides, of course, facility for accommodating any new type of pickup which may be introduced, requiring a different input from existing types.

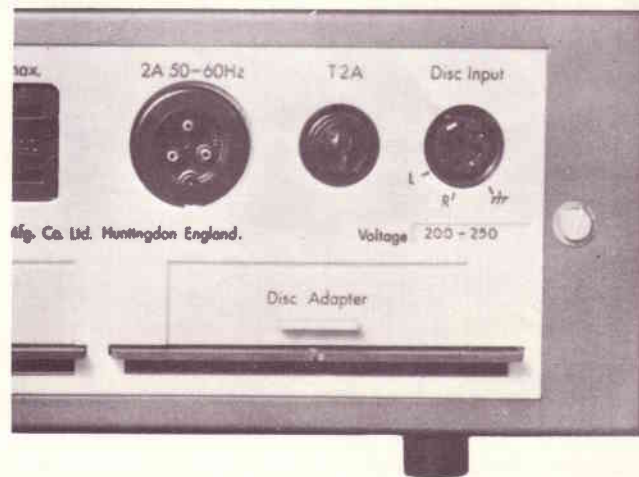


FIG. 5

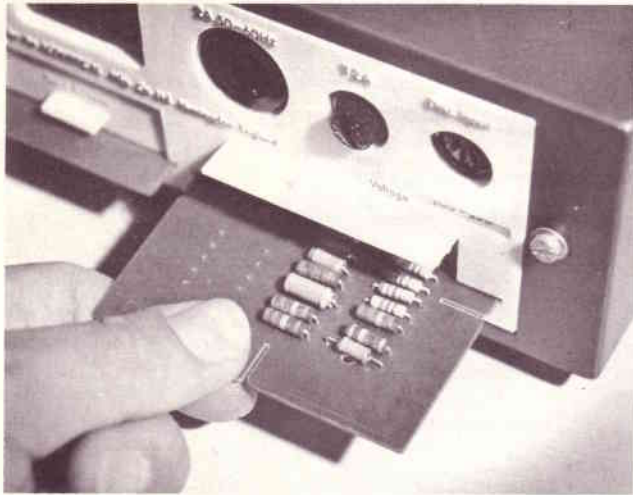


FIG. 6 DISC ADAPTOR BOARD

Radio (See Fig. 7)

Sockets are provided on the Quad 33 for two radio tuners to be connected. For example, an FM tuner, used for mono or stereo, may be connected to Radio 1

input and an AM tuner for long distance reception to Radio 2. Quad self-powered tuners are supplied with the correct connectors and may be plugged in immediately. The connectors used on other self-powered tuners should be adapted as necessary and those already fitted

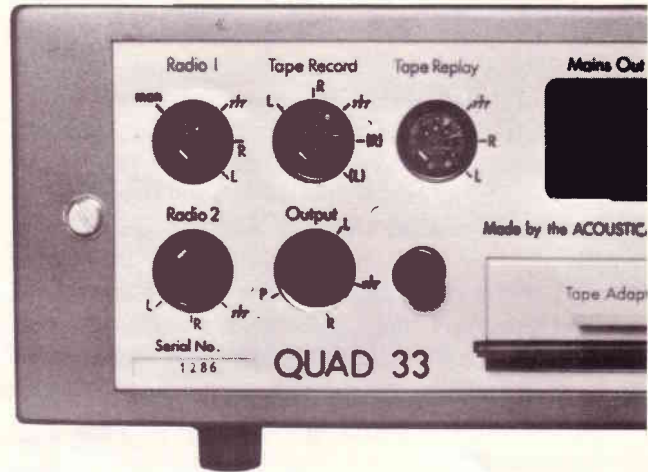


FIG. 7

with the same type of plug should be checked to ensure that the same connections are used. The output of such tuners should be suitable for the Quad 33 input of 100mV and 100K ohms (stereo) or 100mV and 50K ohms (mono).

The mains supply for these tuners should also be taken from the mains outlet sockets at the rear of the Quad 33. (See Fig. 10).

WARNING

On no account should the HT/LT lead of earlier Quad tuners be connected to the power supplies sockets of the Quad 33 control unit. If such tuners are used a separate power pack must be provided.

Tape

Three essential functions are provided for tape recording:

- (1) to provide a signal of the right level for recording, not affected by any of the tone, filter or volume controls and without affecting normal listening;
- (2) to accept a signal of any likely level from the recorder for replay and subject this to all the appropriate control facilities, and



FIG. 8

TAPE ADAPTOR BOARD

- (3) to monitor the signal off the tape during recording without interrupting the recording operation, providing, of course, that the tape recorder has a monitor output.

The plug-in Tape Adaptor Board provides three alternative signal level settings each for recording and replay on both channels, by means of small screws inserted from the underside of the board into the appropriate position for the signal level of the tape recorder to be used. (See Fig. 9 and Specification on Pages 20 and 21).

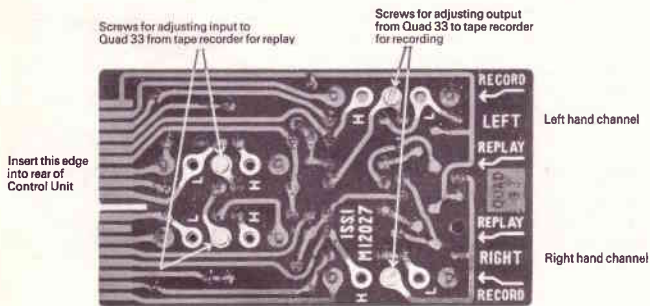


FIG. 9

Normally either one or both tape sockets may be used for recording and replay as convenient the (L) and (R) pins (See Fig. 7) of the record socket being linked inside

the control unit to the corresponding pins of the replay socket. Where the levels and impedances are such that cross-talk can appear in the cables and connectors it will be advisable to use completely separate connections for recording and replay.

Mains Outlets

These sockets are intended for supplying the Quad 303 power amplifier and the FM stereo tuner. Normally it will be more convenient to run the mains supply direct to tape recorder and gramophone motor since these incorporate their own on/off switching, but if other units are run off the Quad 33 mains outlets the total current drawn must not exceed 2 amps.

Mains Input

A 3-pin connector is provided for the control unit and this should be wired to the mains supply using a suitable grade of flexible cable. In countries where an earth connection is not used or where an external earth is connected to the E terminal of the control unit the third pin of the plug should be left blank.

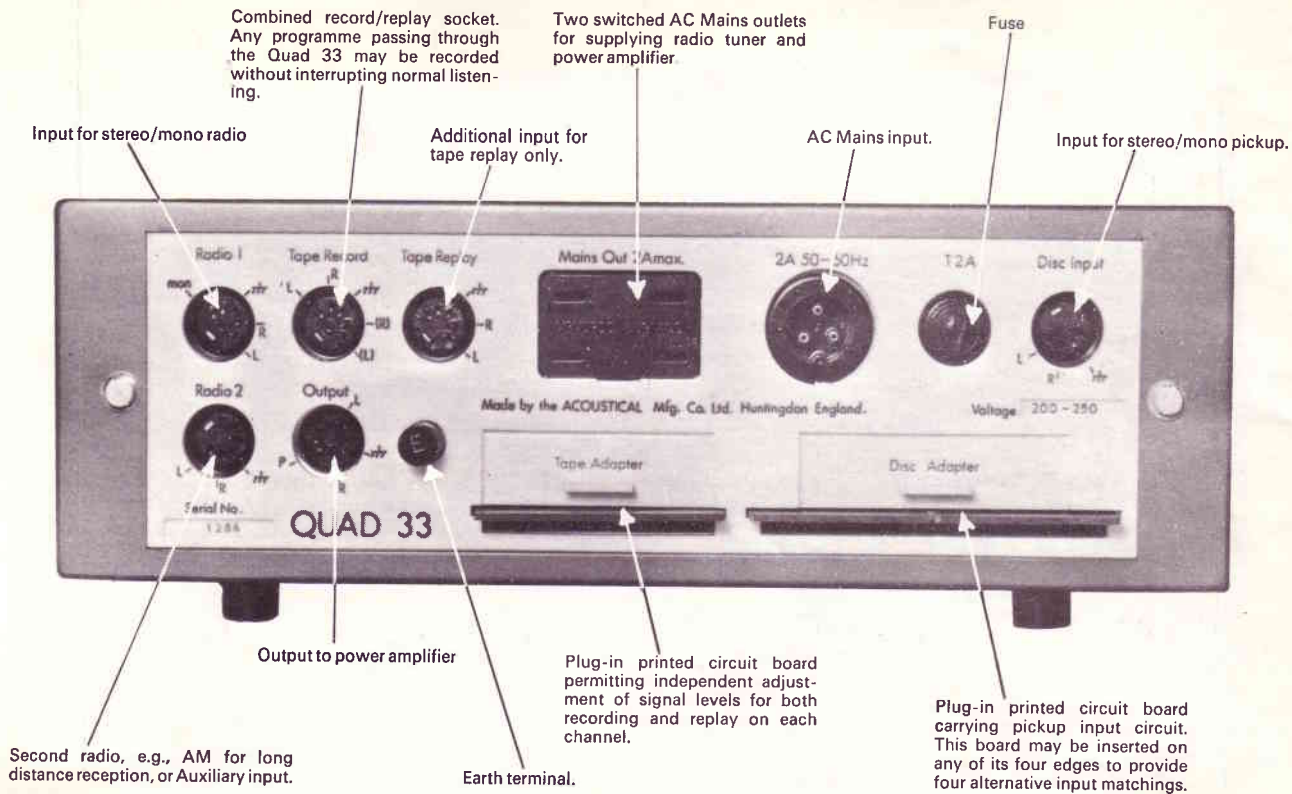


FIG. 10

All signal connections comply with the internationally used DIN standards.

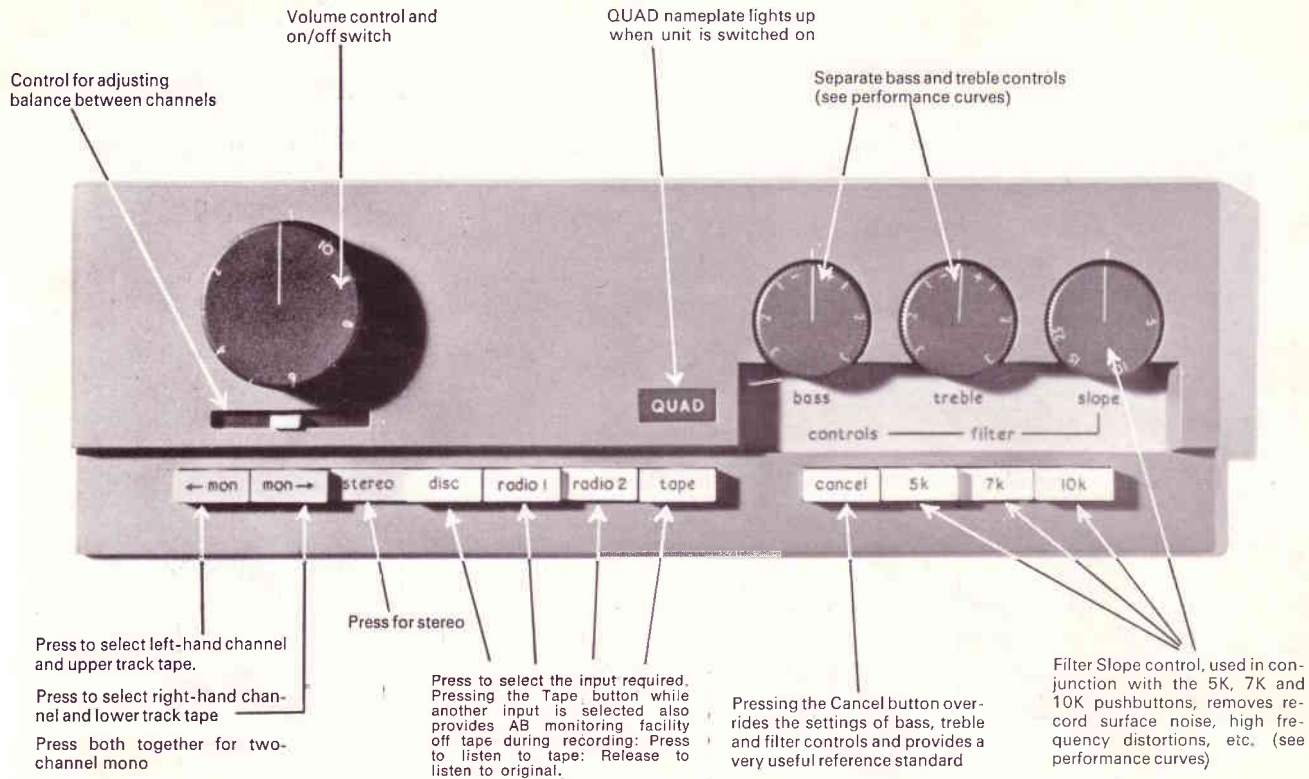


FIG. 11

INITIAL CHECKS AND OPERATION

Before connecting the mains supply, ensure that the voltage marked on the rear of the control unit and the setting of the selectors on the power amplifier and tuner are correct for your mains. These selectors are set by withdrawing the cap $\frac{3}{8}$ "', rotating it to the required voltage and pushing it fully home again. Then connect the mains and rotate the volume control to switch on the equipment. The Quad 33 nameplate, the Quad 303 indicator light and the tuner scale should now light up.

Pushbuttons (see also Filters)

The input (Radio 1, Radio 2, Tape replay or Disc) and the service (Stereo, or Mono on left-hand speaker, right-hand speaker or both), are selected by pressing the appropriate pushbuttons.

With Stereo pressed, all inputs are connected for stereo reproduction. In the case of radio, the tuner will automatically switch to Stereo when a stereo signal is received, reverting to Mono at all other times.

Pressing either or both of the Mon buttons will

reproduce a mono signal from Disc or Radio 1 whether the programme source is mono or stereo. With Radio 2 or Tape inputs, however, apart from selecting loudspeakers, the Mon buttons also select left or righthand inputs, each to its own speaker. In addition,* either input may be reproduced over both speakers by pressing the Stereo button as well as the ←Mon or Mon→ button and, of course, Radio 2 or Tape.

** This facility was not available prior to serial number 7500.*

Volume Control

The volume control is advanced to the appropriate level, bearing in mind that apart from enabling a level of sound to be obtained which suits the listening conditions of the moment, the volume control also has the important function of adjusting the intensity of sound so that it is correctly related to the perspective of the recording or broadcast. This is obviously important for realistic reproduction.

For example, if a voice is picked up close to a microphone in a very absorbent studio, then on repro-